



PART NUMBER DIAGRAM - 1/2" - 2"

FIGURE 4

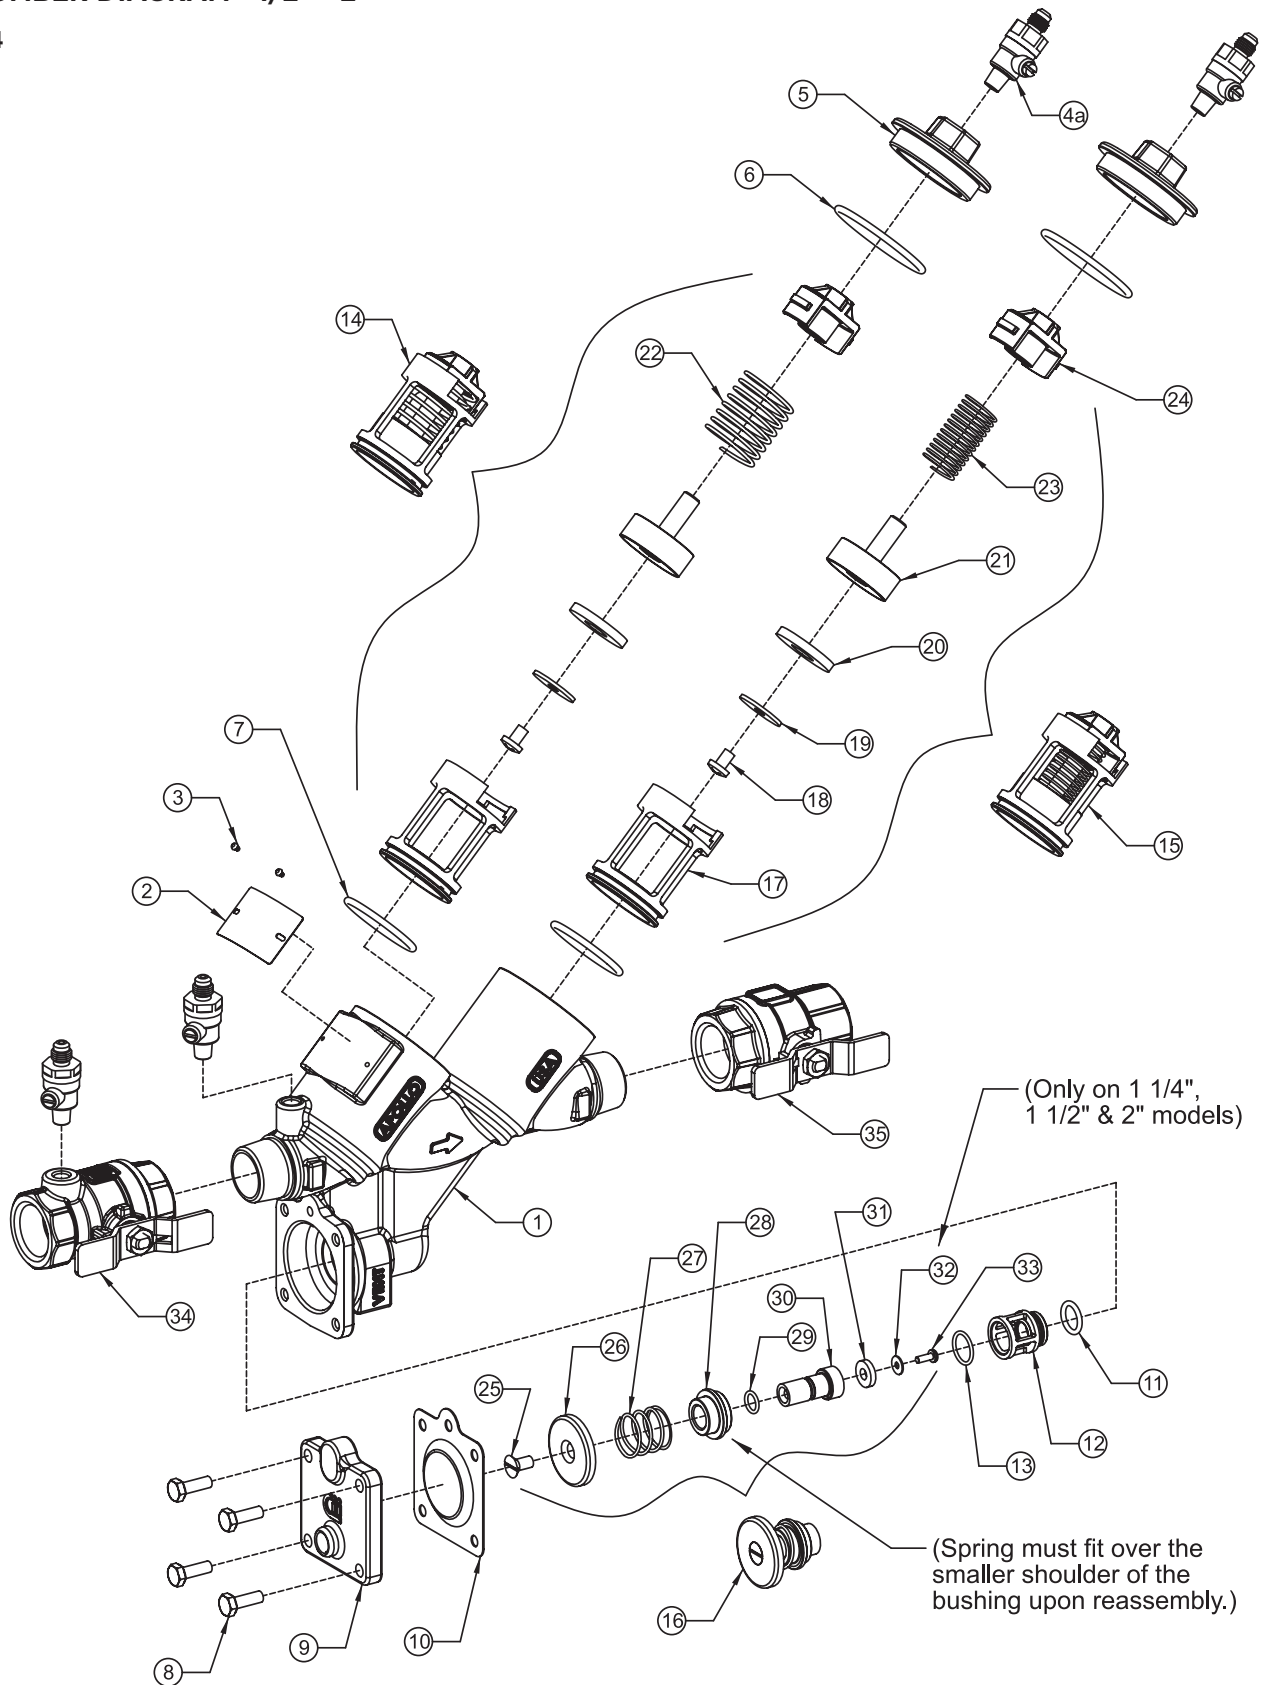

PART NUMBER DIAGRAM - 3/4" - 1"

FIGURE 5

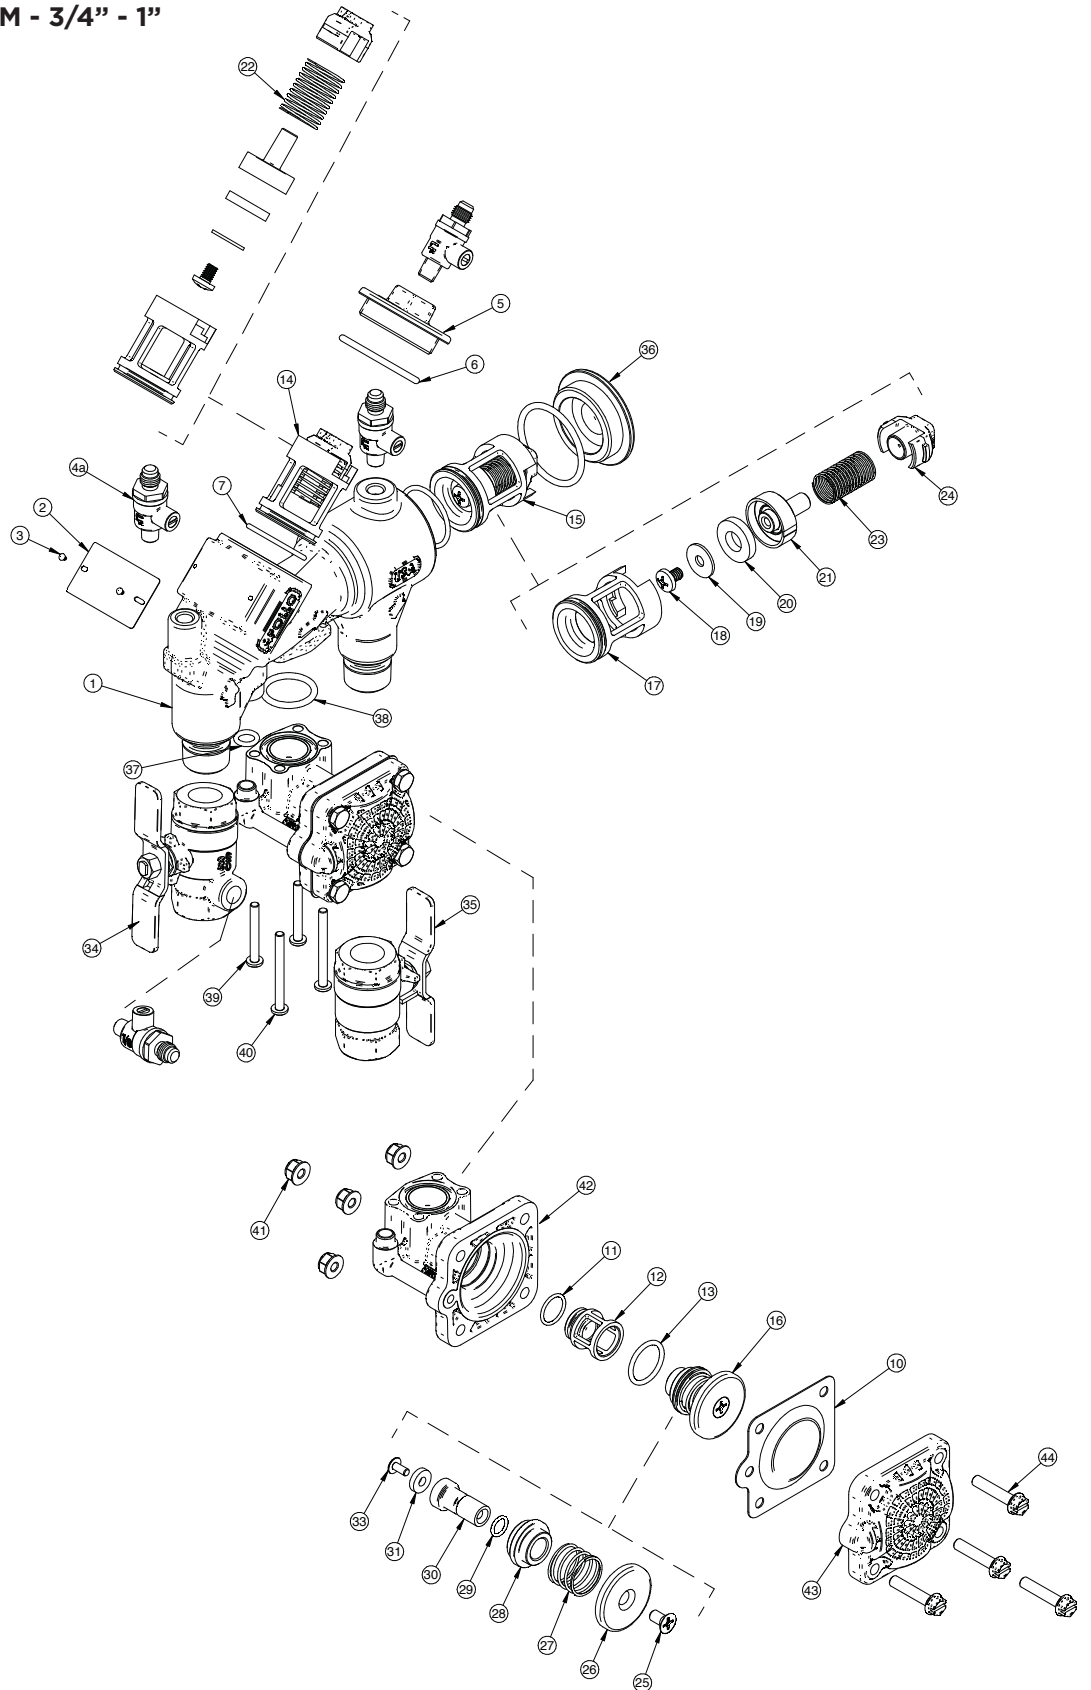

REPAIR KITS RP4A & RPLF4A - 1/2" - 2"

CHECK MODULE RUBBER KIT (ONE KIT REPAIRS ONE CHECK) (UNIVERSAL, FOR STANDARD & LEAD FREE VALVES)			QTY	SIZE				
				1/2"	3/4"	1"	1-1/4" - 1-1/2"	2"
ITEM #	REPAIR KIT MODEL NUMBER	ORDERING NUMBER	RK4A12CMR	RK4A34CMR	RK4A1CMR	RK4A112CMR	RK4A2CMR	
	ORDERING NUMBER		4A-003-01	4A-004-01	4A-005-01	4A-007-01	4A-008-01	
not shown	O-Ring Lubricant		I-9016-00					
20	Check Module Seat Disc	1	D-4771-00	D-4743-00	D-4770-00	D-4853-00	D-4873-00	
7	Check Module O-Ring	1	D-4880-00	D-4744-00	D-4882-00	D-4884-00	D-4885-00	
6	Cap O-Ring	1	D-4881-00	D-4812-00	D-4884-00	D-4885-00	D-4888-00	

RP FIRST CHECK COMPLETE KIT (ONE KIT REPAIRS ONE CHECK) (UNIVERSAL, FOR STANDARD & LEAD FREE VALVES)			QTY	SIZE				
				1/2"	3/4"	1"	1-1/4" - 1-1/2"	2"
ITEM #	REPAIR KIT MODEL NUMBER	ORDERING NUMBER	RK4A12RPCMC	RK4A34RPCMC	RK4A1RPCMC	RK4A112RPCMC	RK4A2RPCMC	
	ORDERING NUMBER		4A-003-03	4A-004-03	4A-005-03	4A-007-03	4A-008-03	
not shown	O-Ring Lubricant		I-9016-00					
14	Check Module S-Assy	1	W-9207-05	W-9208-05	W-9209-05	W-9210-05	W-9211-05	
7	Check Module O-Ring	1	D-4880-00	D-4744-00	D-4882-00	D-4884-00	D-4885-00	
6	Cap O-Ring	1	D-4881-00	D-4812-00	D-4884-00	D-4885-00	D-4888-00	

RP SECOND CHECK COMPLETE KIT (ONE KIT REPAIRS ONE CHECK) (UNIVERSAL, FOR STANDARD & LEAD FREE VALVES)			QTY	SIZE				
				1/2"	3/4"	1"	1-1/4" - 1-1/2"	2"
ITEM #	REPAIR KIT MODEL NUMBER	ORDERING NUMBER	RK4A12CMC	RK4A34CMC	RK4A1CMC	RK4A112CMC	RK4A2CMC	
	ORDERING NUMBER		4A-003-02	4A-004-02	4A-005-02	4A-007-02	4A-008-02	
not shown	O-Ring Lubricant		I-9016-00					
15	Check Module S-Assy	1	W-9075-05	W-9003-05	W-9074-05	W-9159-05	W-9204-05	
7	Check Module O-Ring	1	D-4880-00	D-4744-00	D-4882-00	D-4884-00	D-4885-00	
6	Cap O-Ring (for DC/RP)	1	D-4881-00	D-4812-00	D-4884-00	D-4885-00	D-4888-00	
extra part(s)	Bonnet O-Ring (for PVB)	1	D-4812-00	D-4883-00	D-4887-00	D-4858-00		

RP RELIEF VALVE RUBBER KIT (UNIVERSAL, FOR STANDARD & LEAD FREE VALVES)			QTY	SIZE				
				1/2"	3/4"	1"	1-1/4" - 1-1/2"	2"
ITEM #	REPAIR KIT MODEL NUMBER	ORDERING NUMBER	RK4A1RVR			RK4A112RVR	RK4A2RVR	
	ORDERING NUMBER		4A-005-04			4A-007-04	4A-008-04	
not shown	O-Ring Lubricant		I-9016-00					
10	RV Diaphragm	1	D-2632-00			D-2505-00	D-4909-00	
13	RV Bushing Face O-Ring	1	D-4893-00			D-4744-00	D-4904-00	
11	RV Seat O-Ring	1	D-4892-00			D-4910-00	D-4903-00	
29	RV Stem O-Ring	1	D4891-00			D-4927-00	D-4902-00	
31	RV Seat Disc	1	D-4833-00			D-4911-00	D-4912-00	
37	RV Sensing Passage O-Ring		D502500					
38	RV Body O-Ring		D544000					

REPAIR KITS RP4A & RPLF4A - 1/2" - 2" (CONTINUED)

RP RELIEF VALVE COMPLETE KIT (UNIVERSAL, FOR STANDARD & LEAD FREE VALVES)		QTY	SIZE				
			1/2"	3/4"	1"	1-1/4" - 1-1/2"	2"
ITEM #	REPAIR KIT MODEL NUMBER		RK4A1RVC			RK4A112RVC	RK4A2RVC
	ORDERING NUMBER		4A-005-05			4A-007-05	4A-008-05
not shown	O-Ring Lubricant		I-9016-00				
10	RV Diaphragm	1	D-2632-00			D-2505-00	D-4909-00
13	RV Bushing Face O-Ring	1	D-4893-00			D-4744-00	D-4904-00
11	RV Seat O-Ring	1	D-4892-00			D-4910-00	D-4903-00
16	RV S-Assy	1	W-9586-05			W-9587-05	W-9588-05
12	RV Seat	1	L-7894-00			L-8038-00	L-8039-00
37	RV Sensing Passage O-Ring		D502500				
38	RV Body O-Ring		D544000				

RP TOTAL RUBBER KIT (REPLACE ALL RUBBER PARTS IN ONE RP VALVE) (UNIVERSAL, FOR STANDARD & LEAD FREE VALVES)		QTY	SIZE				
			1/2"	3/4"	1"	1-1/4" - 1-1/2"	2"
ITEM #	REPAIR KIT MODEL NUMBER		RK4A12RPR	RK4A34RPR	RK4A1RPR	RK4A112RPR	RK4A2RPR
	ORDERING NUMBER		4A-003-09	4A-004-09	4A-005-19	4A-007-19	4A-008-19
not shown	O-Ring Lubricant		I-9016-00				
20	Check Module Seat Disc	2	D-4771-00	D-4743-00	D-4770-00	D-4853-00	D-4873-00
7	Check Module O-Ring	2	D-4880-00	D-4744-00	D-4882-00	D-4884-00	D-4885-00
6	Cap O-Ring	2	D-4881-00	D-4812-00	D-4884-00	D-4885-00	D-4888-00
10	RV Diaphragm	1	D-2632-00			D-2505-00	D-4909-00
13	RV Bushing Face O-Ring	1	D-4893-00			D-4744-00	D-4904-00
11	RV Seat O-Ring	1	D-4892-00			D-4910-00	D-4903-00
29	RV Stem O-Ring	1	D-4891-00			D-4927-00	D-4902-00
31	RV Seat Disc	1	D-4833-00			D-4911-00	D-4912-00
37	RV Sensing Passage O-Ring		D502500				
38	RV Body O-Ring		D544000				

RP COMPLETE INTERNALS KIT (ONE KIT REPAIRS ONE RP VALVE) (UNIVERSAL, FOR STANDARD & LEAD FREE VALVES)		QTY	SIZE				
			1/2"	3/4"	1"	1-1/4" - 1-1/2"	2"
ITEM #	REPAIR KIT MODEL NUMBER		RK4A12TRP	RK4A34TRP	RK4A1TRP	RK4A112TRP	RK4A2TRP
	ORDERING NUMBER		4A-003-10	4A-004-10	4A-005-10	4A-007-10	4A-008-10
not shown	O-Ring Lubricant		I-9016-00				
14	1st Check Module S-Assembly	1	W-9207-05	W-9208-05	W-9209-05	W-9210-05	W-9211-05
15	2nd Check Module S-Assembly	1	W-9075-05	W-9003-05	W-9074-05	W-9159-05	W-9204-05
7	Check Module O-Ring	2	D-4880-00	D-4744-00	D-4882-00	D-4884-00	D-4885-00
6	Cap O-Ring	2	D-4881-00	D-4812-00	D-4884-00	D-4885-00	D-4888-00
10	RV Diaphragm	1	D-2632-00			D-2505-00	D-4909-00
13	RV Bushing Face O-Ring	1	D-4893-00			D-4744-00	D-4904-00
11	RV Seat O-Ring	1	D-4892-00			D-4910-00	D-4903-00
16	RV S-Assembly	1	W-9586-05			W-9587-05	W-9588-05
12	RV Seat	1	L-7894-00			L-8038-00	L-8039-00
37	RV Sensing Passage O-Ring		D502500				
38	RV Body O-Ring		D544000				